




Assembly Tools


Unit:mm

E-ring dimension				E-ring stack	Applicator	Dispenser
Size-No.	I.D.	O.D.	T			
ETW-1.2	1.2	3.0	0.3	ES-1.2	ETH-1.2	ETS-1.2
1.5	1.5	4.0	0.4	1.5	1.5	1.5
1.9	1.9	4.5	0.4	1.9	1.9	1.9
2.0	2.0	5.0	0.4	2.0	2.0	2.0
2.3	2.3	6.0	0.4	2.3	2.5	2.5
2.5	2.5	6.0	0.4	2.5	2.5	2.5
3.0	3.0	7.0	0.6	3.0	3.0	3.0
3.2	3.2	7.0	0.6	3.2	3.0	3.0
4.0	4.0	9.0	0.6	4.0	4.0	4.0
5.0	5.0	11.0	0.6	5.0	5.0	5.0
6.0	6.0	12.0	0.8	6.0	6.0	6.0
7.0	7.0	14.0	0.8	7.0	7.0	7.0


ET HOLDER

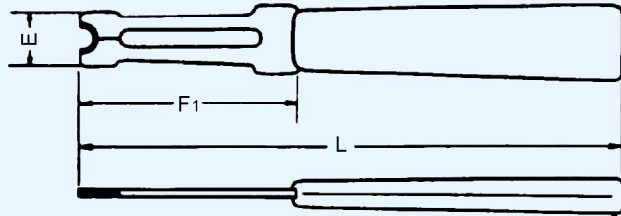

A-type

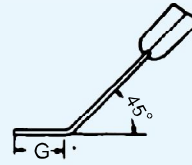

O-type

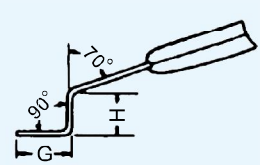

A type and O type will be different
by the implement locations of stop-ring,
so please choose the part of easy use.

Unit:mm

Adaptabe E type stop-ring				ET Holder Size-No.	Size				
Size-No.	Inside diameter	Outside diameter	Thickness of plate		L	F1	E	G	H
ETW-0.6	0.60	1.5	0.2	ETH-0.6	123	39	3.6	12	5
0.7	0.67	2.0	0.2	0.7					
0.8	0.80	2.0	0.2	0.8					
1.0	0.98	2.8	0.2	1.0			5		
1.2	1.20	3.0	0.3	1.2	122	38	7	9	8
1.5	1.50	4.0	0.4	1.5					
1.9	1.90	4.5	0.4	1.9					
2.0	2.00	5.0	0.4	2.0					
2.3	2.30	6.0	0.4	2.3	124	40	10	10	
2.5	3.00	6.0	0.4	2.5					
3.0	3.20	7.0	0.6	3.0	123	43	12	12	
3.2	3.50	7.0	0.6	3.2					
4.0	4.00	9.0	0.6	4.0	129	49	18	16	10
5.0	5.00	11.0	0.6	5.0					
6.0	6.00	12.0	0.8	6.0	154	54	21	18	12
7.0	7.00	14.0	0.8	7.0					
8.0	8.00	16.0	0.8	8.0	160	60	24	20	
9.0	9.00	18.0	0.8	9.0					
10.0	10.00	20.0	1.0	10.0	163	53	26	23	14
12.0	12.00	23.0	1.0	12.0					
					165	65	29	26	